



Clamps 夹具

附件清单(Attachment list)		
名称name	编号code	数量Quantity
U型夹板	17S265001	2
安装架	17S265002	1
连接臂1	17S265003	1
连接臂2	17S265004	1
隔离管	17S265005	3
连接扣	17S265006	1
刻度片	17S265007	1
隔离管	17S265008	2
螺栓Bolt GB/T5783 M10×180		4
螺栓Bolt GB/T5783 M10×100		4
螺栓Bolt GB/T5783 M8×25		4
螺栓 Bolt GB/T5783 M8×20		4
螺栓 Bolt GB/T5783 M8×50		2
螺母Nut GB/T6170 M10		12
螺母Nut GB/T6170 M8		8
螺母Nut GB/T6170 M8		2
平垫圈 Flat washer GB/T97.1 8		12
弹簧垫圈Spring washer GB/T93 8		10
平垫圈Flat washer GB/T97.1 10		8
弹簧垫圈Spring washer GB/T93 10		8
Appearance of the actual antenna may differ from the pictures. —— 请以实物为准。		

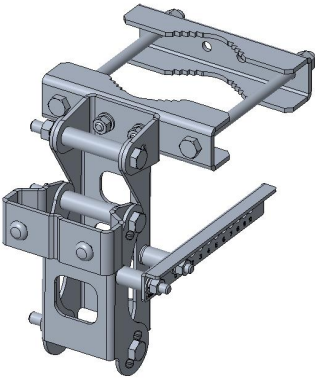

Upper bracket
上支架组件

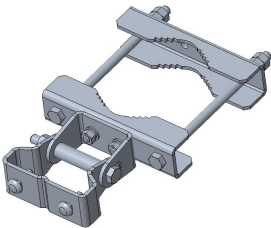

Lower bracket
下支架组件

Installation Tools 安装工具




18 mm combination wrench(2PCS)
16 mm combination wrench(2PCS)
8 mm combination wrench(2PCS)
两用扳手




Inclinometer 倾角仪

Step 1: Assemble the bracket
第一步：组装支架

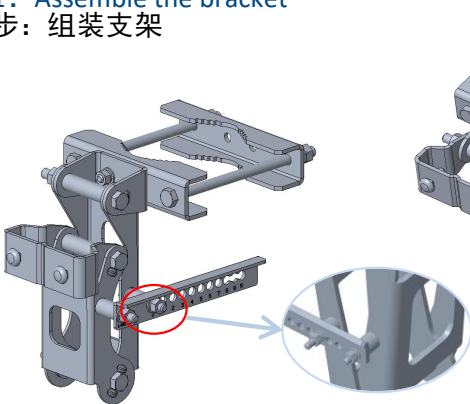


Follow the directions shown in the picture to install brackets.
请按图中所示安装好上支架、下支架。

Step 2: Install the bracket
第二步：安装支架

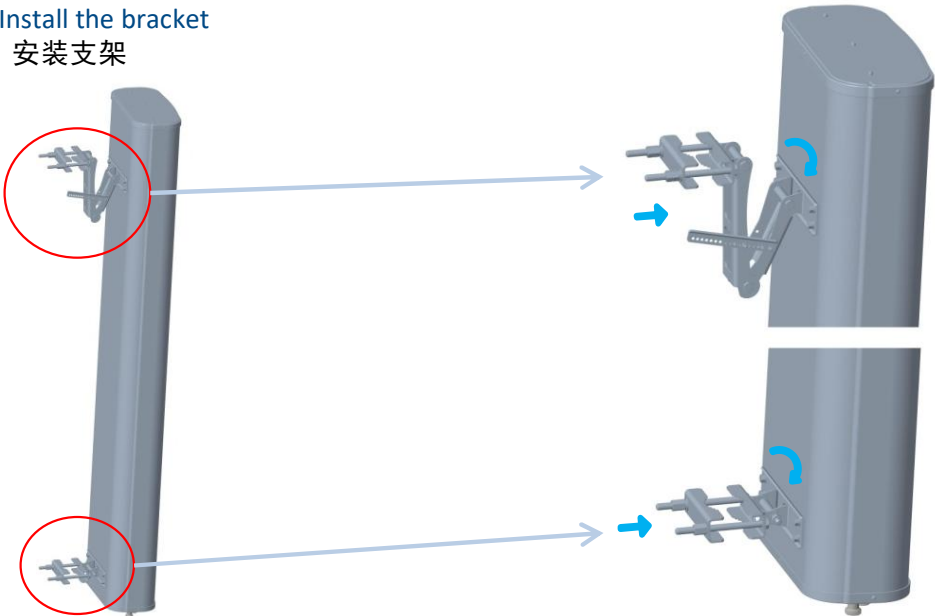


Follow the directions shown in the picture to install brackets.
请按图中所示将上支架、下支架安装到天线。

Step 3: Install the antenna
第三步：安装天线

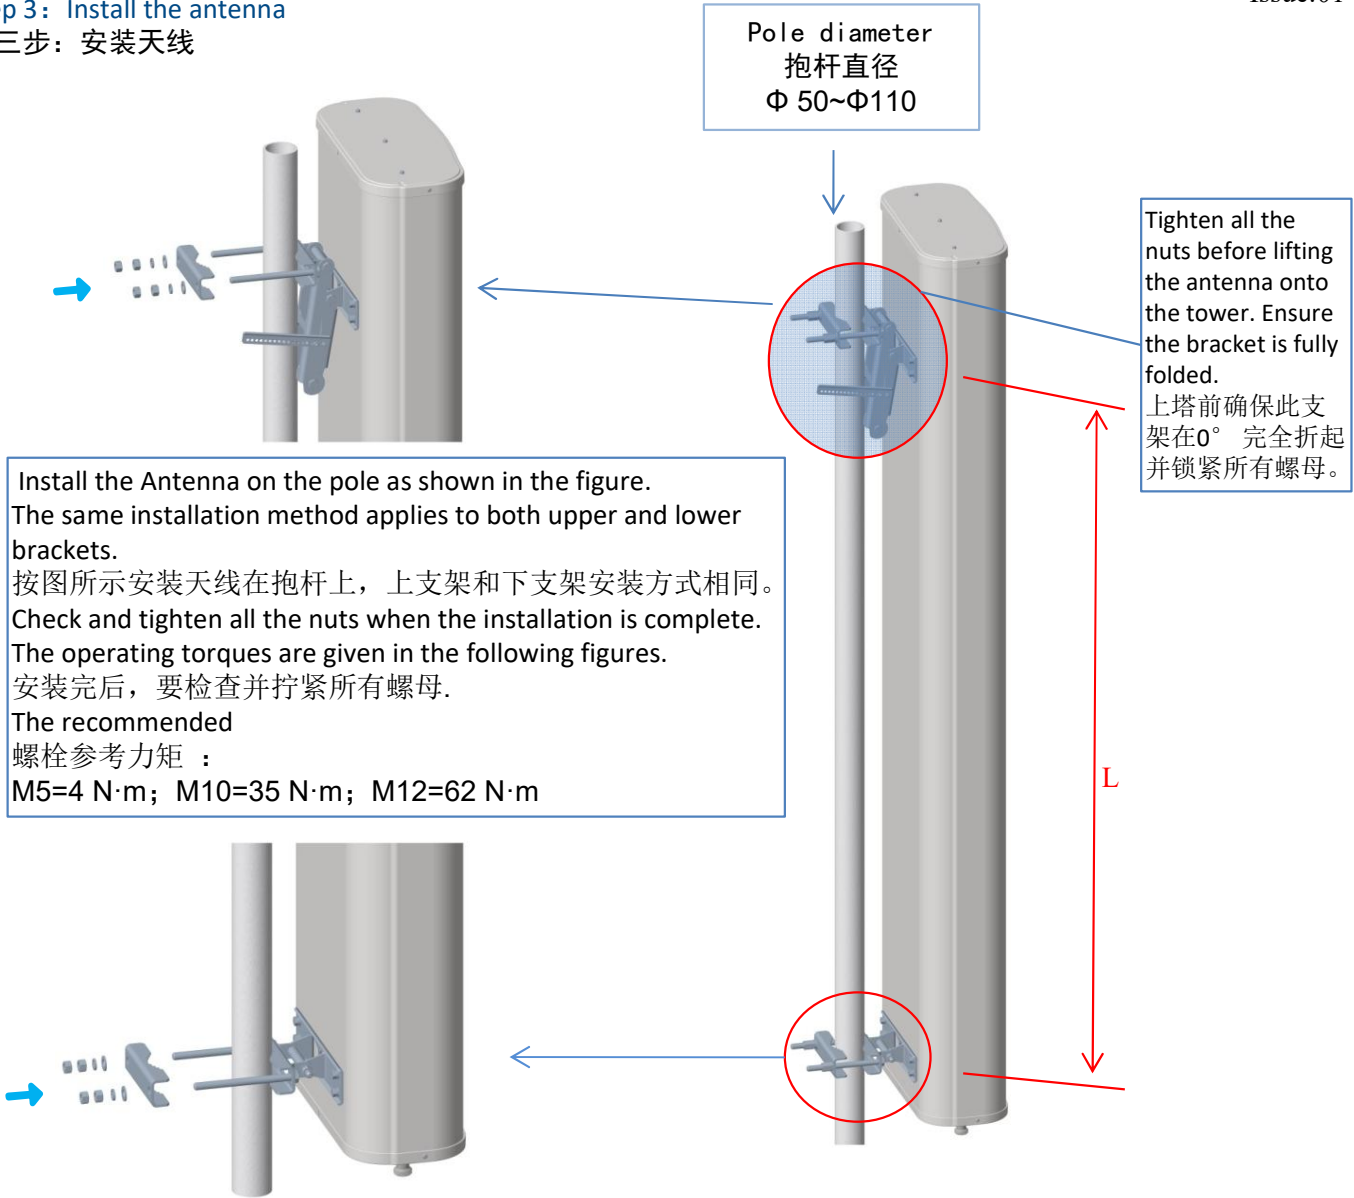

Step 4: Adjust the mechanical downtilt angle
第四步：调节天线的机械下倾角

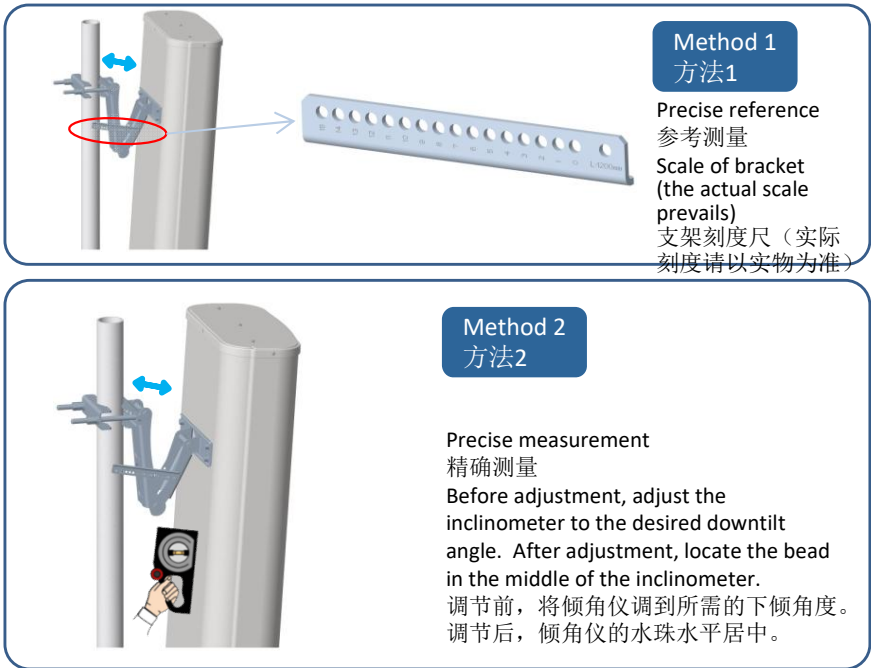

17S265	
Mounting plate distance 安装板距离 L(mm)	Down tilt angle 下倾角调节范围
1200±5	0-18°
1600±5	0-12°
After the adjustment is complete, tighten all the nuts. 角度调整完成后，拧紧所有螺母。 Only qualified personnel are allowed to install the antenna. 天线的安装需由合格的安装人员操作。	