


Clamps 夹具

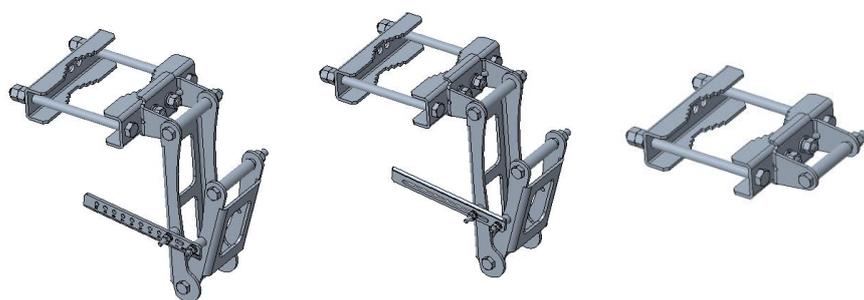

Upper bracket
上支架组件

Upper bracket
中支架组件

Lower bracket
下支架组件

Installation Tools 安装工具



- 18 mm combination wrench(2PCS)
 - 16 mm combination wrench(2PCS)
 - 13 mm combination wrench(2PCS)
 - 8 mm combination wrench(2PCS)
- 两用扳手




Inclinometer 倾角仪

Attachment list 附件清单		
Name 名称	Code 图号	Quantity 数量
Holder 1固定板1	17S108A01	2
Holder 2固定板2	17S108A02	2
Holder 3固定板3	12S20905	6
Joint part连接板	17S132006	3
Support ing rod支撑管	17S108A05	7
Splint plate 1夹板1	17S132A01	2
Splint plate 2夹板2	17S132A02	2
Scale plate 1刻度尺1	17S134001	1
Scale plate 2刻度尺2	17S134002	1
Bolt GB/T5783 M12×180六角头螺栓		6
Bolt GB/T5783 M10×110六角头螺栓		7
Bolt GB/T5783 M10×25 六角头螺栓		6
Bolt GB/T5783 M6×40 六角头螺栓		4
Nut GB/T6170 M12 六角螺母		12
Nut GB/T6170 M10 六角螺母		13
Nut GB/T6170 M6 六角螺母		4
Flat washer GB/T97.1 12 平垫圈		6
Spring washer GB/T93 12 弹簧垫圈		6
Flat washer GB/T97.1 10 平垫圈		13
Spring washer GB/T93 10 弹簧垫圈		13
Flat washer GB/T97.1 6 平垫圈		4
Spring washer GB/T93 6 弹簧垫圈		4


Appearance of the actual antenna may differ from the pictures. —— 请以实物为准。

Step 1: Assemble the bracket 第一步：组装支架

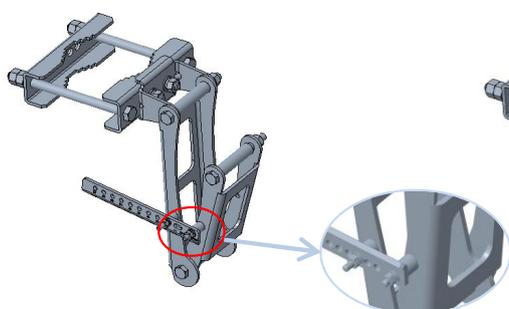

Follow the directions shown in the picture to install brackets.
请按图中所示安装好上支架、下支架。

Step 2: Install the bracket 第二步：安装支架


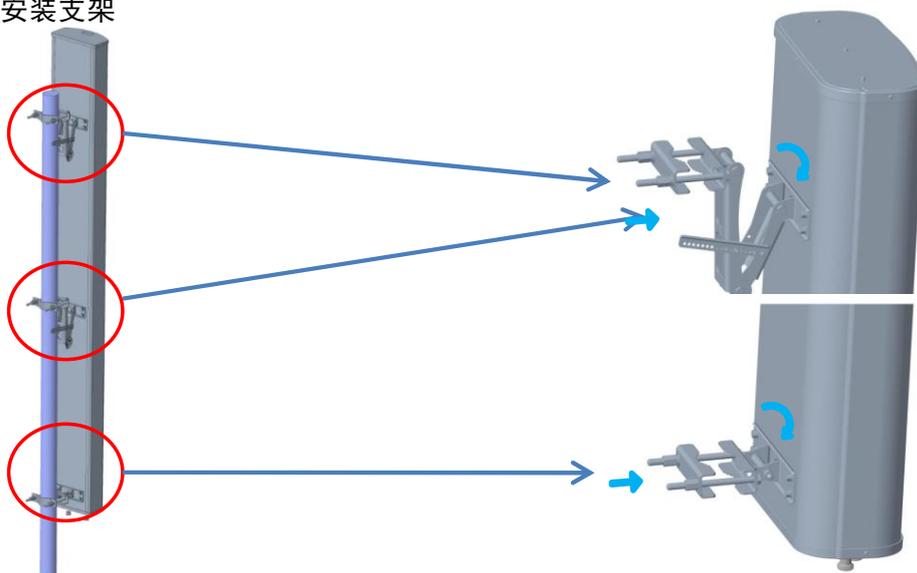


Follow the directions shown in the picture to install brackets.
请按图中所示将上支架、下支架安装到天线。

Step 3: Install the antenna

第三步：安装天线

Pole diameter
抱杆直径
Φ 50~Φ110

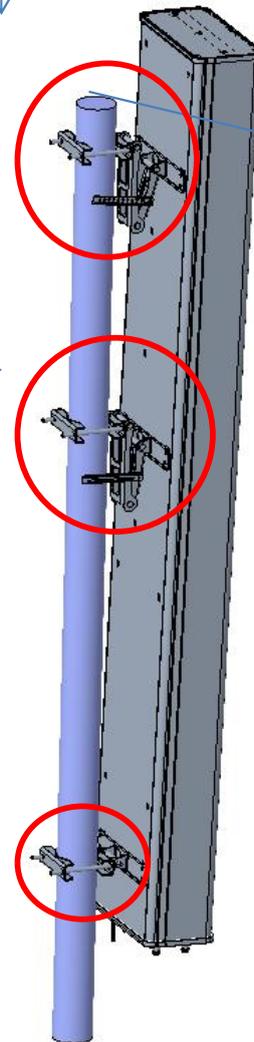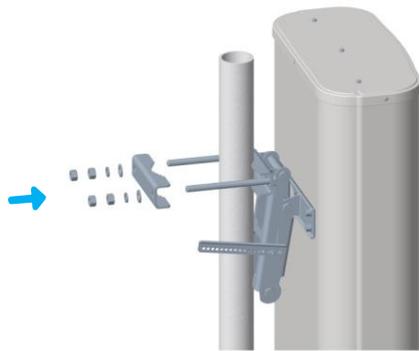

Tighten all the nuts before lifting the antenna onto the tower. Ensure the bracket is fully folded.


上塔前确保此支架在0° 完全折起并锁紧所有螺母。

Install the Antenna on the pole as shown in the figure. The same installation method applies to both upper and lower brackets.

按图所示安装天线在抱杆上，上支架和下支架安装方式相同。安装完后，要检查并拧紧所有螺母。


The recommended
螺栓参考力矩：

M6=4 N·m; M10=35 N·m; M12=62 N·m

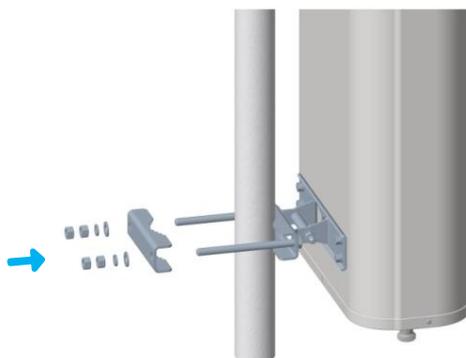

Step 4: Adjust the mechanical downtilt angle

第四步：调节天线的机械下倾角

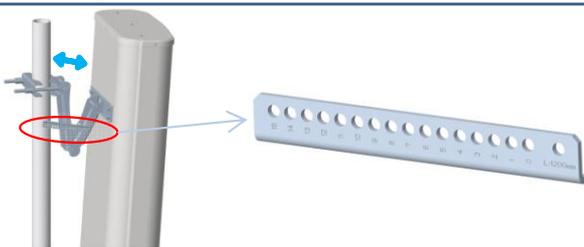

Method 1
方法1

Precise reference
参考测量
Scale of bracket
(the actual scale prevails)
支架刻度尺（实际刻度请以实物为准）



Method 2
方法2

Precise measurement
精确测量
Before adjustment, adjust the inclinometer to the desired downtilt angle. After adjustment, locate the bead in the middle of the inclinometer.
调节前，将倾角仪调到所需的下倾角度。调节后，倾角仪的水珠水平居中。

17S134	
Mounting plate distance 安装板距离 L(mm)	Down tilt angle 下倾角调节范围
1200±5	0-18°
1600±5	0-12°
After the adjustment is complete, tighten all the nuts. 角度调整完成后，拧紧所有螺母。 Only qualified personnel are allowed to install the antenna. 天线的安装需由合格的安装人员操作。	